



Harmar Stair Lift and Vertical Platform Installation and Service Course

- A. Helix Curved Stair Lift
 - a. Measurement overview for a Helix stair lift (video and measurement manual)
 - b. Installation Overview and ASME A18.1-2014 "SAFETY STANDARD FOR PLATFORM LIFTS AND STAIRWAY CHAIR LIFTS" requirements
 - c. Video: How to use the Diagnostic Kit for troubleshooting
 - d. Video: How to change the chassis board
 - e. Video: How to change the batteries

- B. Straight Stair Lift
 - a. Measurement overview for a Straight Run Staircase for a Pinnacle or Summit stair lift
 - b. Pinnacle and Summit Installation Overview and ASME A18.1-2014 "SAFETY STANDARD FOR PLATFORM LIFTS AND STAIRWAY CHAIR LIFTS" requirements
 - c. Video: How to install a Pinnacle chassis
 - d. Video: How to install a Pinnacle SL300 stair lift
 - e. Video: How to change a Pinnacle battery
 - f. Video: How to change the Pinnacle Board
 - g. Video: How to change the Pinnacle seat harness
 - h. Video: How to program the Pinnacle Wireless Remotes

- C. Residential Vertical Platforms
 - a. Installation Overview and ASME 18.1 Section 5 requirements
 - b. Electrical requirements per ANSI/NFPA 70 & ASME 18.1
 - c. Service Overview
 - d. Overview of installation and owner's manual

- D. Commercial Vertical Platforms
 - a. Installation Overview and ASME 18.1 Section 5 requirements
 - b. Electrical requirements per ANSI/NFPA 70 & ASME 18.1
 - c. Service Overview
 - d. Overview of installation and owner's manual


John Santoyo

Director of Installations and Service

941-308-7410